#### LGG North America All In One System • Other •



### Home 5/8 All In One Energy Storage System Commissioning Quick Guide

- 1. Power Up & Set Up
- 2. Commission
- 3. ThinQ\_App
- 4. Product Specification

#### Power up the Home 5/8 per the QIG, follow these steps exactly, please.

- 1 In the All-In-One (AIO) battery enclosure(s), turn ON the DC circuit breaker
- 2 In the Smart Energy Box (SE Box)
  - a. Turn ON the Main Service circuit breaker
    - i. If Partial Backup, turn ON Main Service circuit breaker outside of SE Box
    - ii. Wait for touch screen to turn on (up to 30 seconds or so)



- b. Turn ON the circuit breaker for the AIO(s)
- c. Turn ON the circuit breaker for the PV inverter input
- 3 Return to the AIO "battery" enclosure
  - a. Press and release the Power button, it will remain "pressed in" ON position
  - b. Press and HOLD the Black Start Button, until you hear click-click (up to about 6 seconds)
- 4 Return to the SE Box, continue with Touch Screen Setup

#### Set up | commission test | connect to Internet | enable system | ThinQ homeowner App setup

#### Easy to use TOUCH Screen

Full details in the Installation Manual > Installer and User Settings > page 89


1 Country and Language	9		
a. Touch arrow to advance	Country and Language Setting		
	Country		
	Language Er	nglish	
		→	
2 Network / Internet Connection			
a. SKIP Internet Connection for now	Network Type		
b. Home 5/8 does not require Internet, App or laptop to commission			
c. Touch arrow to advance	Wired		
	Wireless		
	✓ Skip Internet Settings		
	<b>~</b>	$\rightarrow$	
3 Installer Password Creation			
a. 8 characters minimum	Installer Password Setting		
b. Requires (1) number, (1) letter, (1) special character	Input Password		
c. Allows access to detailed PCS settings	Confirm Password		
d. Write password on back of SE Box safety cover if desired	* Your password must be at least 8 characters long.		
e. Most installers prefer to use same password for all Home 5/8	Password should contain at least one number, one character and one special characte		
	←	Apply	
4 System Information Check	······································		
a. Number of AIO (ESS) detected	System Information Check that the loaded system information is correct, and if it is not, press the "Rescan" button to retrieve the information.		
b. Serial numbers	SE Box Serial Number : 002KR0264119	Rescan	
c. Software versions	Common ESS1 🖌 ESS2 🖌 ESS3	ESS4	
d. Touch arrow to advance	PMS Serial Number : US2001BSME00000D	1	
e. ESS model name in each ESS tab. - Home5 : RA500K16A11 - Home 5/8 : RA768K16A11	PMS S/W Version : 1.1.1352 App S/W Version : 1.1.0710 CSIP Library Version : 1.1.4.2 CSIP Application Version : 1.0.0		
	C Detected ESS : 2	$\rightarrow$	

5 Firmware	Firmware l	Indate
a. Touch arrow to advance	Firmware Update         USB Status : UnPlugged         Current version       PMS : 1.1.1352       APP : 1.1.0710	
<ul> <li>b. Firmware update will advance after system is enabled, and registered in ThinQ app</li> </ul>		
c. No need to take vital install time to update here	ESS1         PCS         LG P1 01.00.01.00 R85           ESS2         PCS         LG P1 01.00.01.00 R85	
	Sync version	
	PCS LG P1 01.00.01.00 R85 53.32 Battery 0724	
	← Match Ve	rsion →
6 Date and Time Settings a. Touch each field to update	Date & Time Settings	
b. Auto Date and Time will set after Home 5/8	Timezone	New York
is connected to the Internet	Automatic date and time	Auto
	Date	Thu Jul 13 2023
	Time	08:54 PM
	Time format	12 Hour
	<del>~</del>	$\rightarrow$
7 System Name, Install Date a. Touch/Enter System Name	Additional System	n Information
b. Most installers prefer homeowner last	System Name	My ESS
name/city/ESS, i.e. Smith Chicago ESS c. Touch/Enter install date	Installation Date	Apr 14, 2023
	4	÷
<ul><li>8 Utility Information</li><li>a. Touch/Enter utility company name</li></ul>	Utility Information	
b. Profile and Parameters are ok as is, for this stage	Utility Company	pgne
	Grid Profile	UL1741SB
	Network Settings	Edit >
	Config Parameters	Edit >
	÷	$\rightarrow$


9 PV Inverter Information	• • • • • • • • • • • • • • • • • • •	· · · · · · · · · · · · · · · · · · ·
a. Touch/Enable PV use	PV	
b. Touch/Enter PV inverter AC output nameplate rating	PV Inverter	Use 🌔
c. Touch/Enter PV DC array size	Rated Output Power	10.00 kW
d. To verify the power in PV meter	Installed PV Panel Capacity	18.00 kWp
	PV Meter	Confirmed >
	+	$\rightarrow$
10 External E-Stop	• • • • • • • • • • • • • •	
a. If installed, enable this button	External Device	
b. Port 1-2 can be skipped at this stage	External Shutdown Switch	Not Installed
	Port 1	None
	Port 2	None
11 Operating Mode	<b>•</b>	→ 
a. Touch / choose Backup Only Mode for this	Operating Mode	
stage		
<ul> <li>b. Easily updated later, in ThinQ homeowner monitoring App</li> </ul>	✓ PV Self-consumption	
	Time of Use	
	Backup Only	
	$\leftarrow$	$\rightarrow$
2 Backup and Battery Setting	•••••••••••••••••••••••••••••••••••••••	
a. Touch slider to "Enabled" Backup	Backup and Battery Settir	
Operation	Backup Operation	Enabled 🌑
<ul> <li>b. Change related battery parameters</li> <li>c. "If the Backup Operation is "Disabled", the installer cannot be updated related</li> </ul>	Backup Mode Grid Under Volt Level	88.0 %
	Backup Mode Grid Under Volt Trip Time	0.3 ms
battery parameters. d. Touch Reserve Mode SoC	Backup Mode Start Freq Level	62.5 Hz
	Reserve Mode SoC	0 %
e. Change to 10% f.  Can be updated later if needed	4	$\rightarrow$
g. Touch arrow to return to Setup		
h. Touch arrow to advance		

13 Meter and Breaker Size			
	Meter and Relay Box		
a. Touch Grid Meter	Meter and Relay Box		
b. To verify the power in L1 and L2	Grid Meter	Confirmed >	
c. If you set the PCS (Power Control System) function, activate the Import Only function	Power Control System	Disabled	
after entering the Power Control System and confirm.	Relay Box Aux1	None	
d. If you set up a Relay Box, proceed with	Relay Box Aux1 Connection Test	Open 🔵	
a normal connection test after setting the Type.	Relay Box Aux2	None	
e. Touch arrow to advance	<b>~</b>	$\rightarrow$	
14 Summary	· · · · · · · · · · · · · · · · · · ·		
a. Touch Commissioning Test	Summary		
a. Touch commissioning lest	Country	JUSA	
	Language	English	
	Network Settings	Connected	
	Firmware Version	1.1.1352	
	System Information	PMS S/N:US2001BSME00000D, ESS 2	
	Commissio	oning Test Start System	


#### **Commissioning Test**

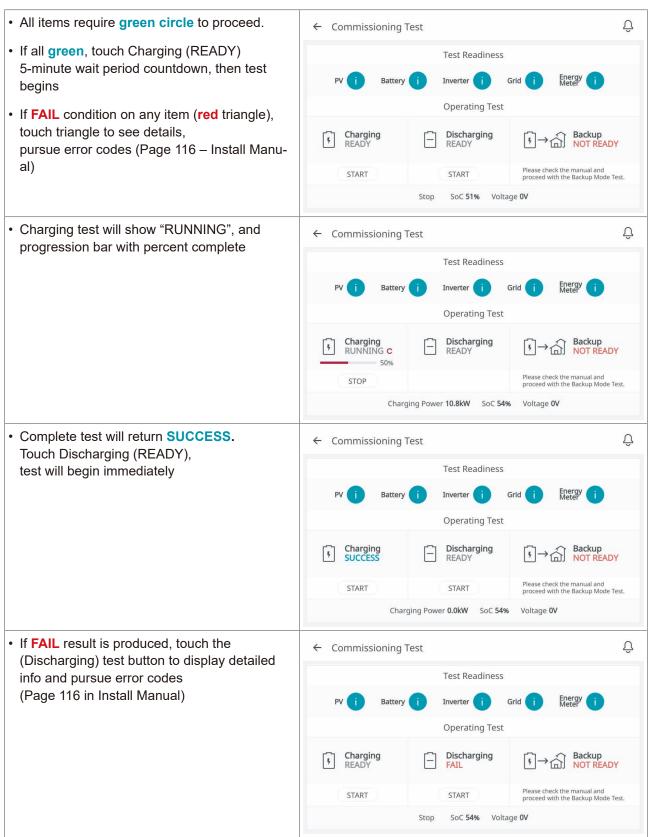


· When Charging and Discharging Tests are complete, with SUCCESS, Backup test will show READY

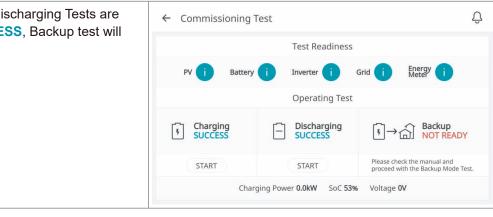

#### **Backup Test**

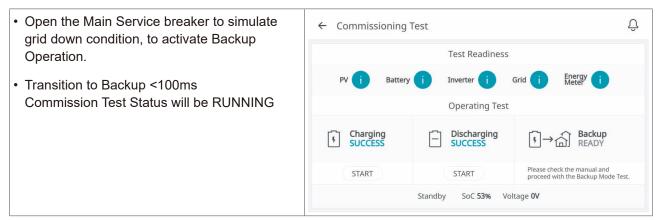


#### **Return to Grid Power, end Backup Test**

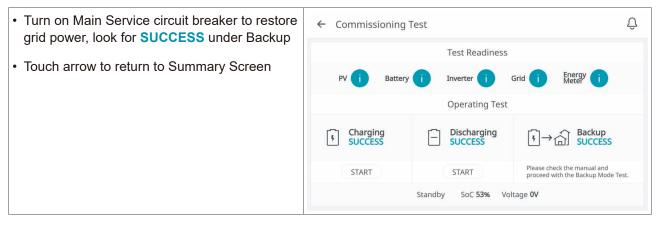

#### Start System

Touch Start System to go to Home Screen	Summar	y
	Country	USA USA
	Language	English
	Network Settings	Connected
	Firmware Version	1.1.1352
	System Information PM:	5 S/N:US2001BSME00000D, ESS 2
	Commissioning	g Test System

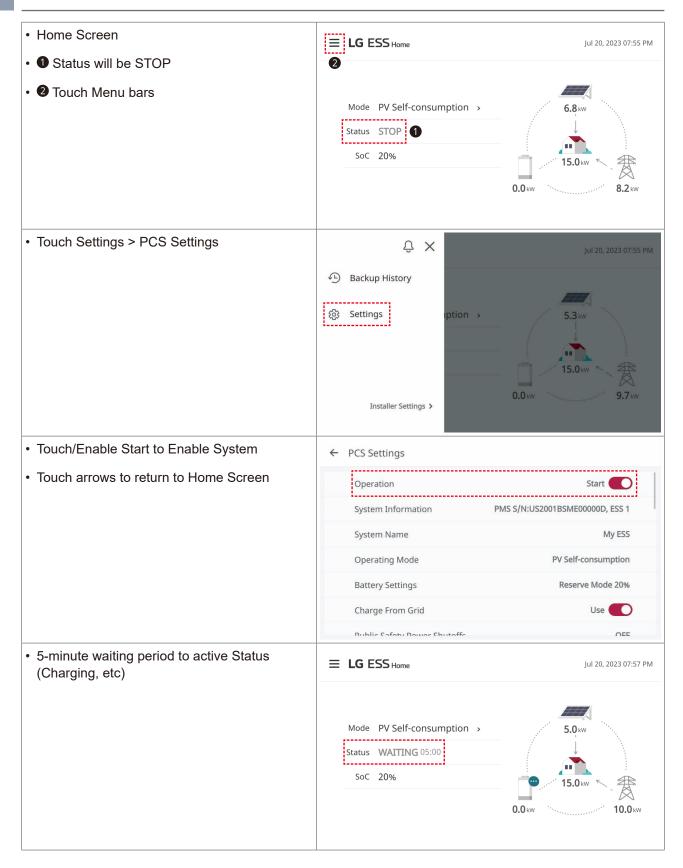

#### **Enable Internet Connection**


Touch Menu bars		Jul 20, 2023 07:58 PM
	Mode PV Self-consumption > Status DISCHARGING SoC 20%	8.0 kW 15.0 kW 7.0 kW 0.0 kW
Touch Settings	ウ×	Jul 20, 2023 07:55 PM
	Backup History	
	ੴ Settings →	5.3 kw 5.3 kw 15.0 kw 9.7 kw
Touch General Settings	← User Settings	
Touch Network Settings	General Settings	Edit >
Touch Wired or Wireless	PCS Settings	Edit >
• For Wireless, choose homeowner SSID, enter wifi password		
• Note - use only 2.4GHz wifi band		
Touch arrows to return to Home Screen		

### Home 5/8 Quick Commissiong Guide **ThinQ App**


#### ThinQ App – Register Home 5/8 ESS

<ul> <li>Download LG ThinQ App</li> <li>iOS or Android App store</li> </ul>	LG Th LG Elect	ronics, Inc.
<ul> <li>Create Account on ThinQ</li> <li>Suggest "Sign in with LG" Touch Create Account</li> </ul>	Welcome to LG ThinQ.	🕕 LG
<ul> <li>Use homeowner email address Set password (8 characters min upper/lower case, number, special character)</li> </ul>	<ul> <li>Sign in with LG</li> <li>Sign in with Google</li> <li>Sign in with Apple</li> <li>Another account &gt;</li> </ul>	Email ID Password Sign in Reset password Create account
<ul> <li>Add a Device</li> <li>Touch Add a Device Touch Select Device</li> </ul>	4:06 <b>- 7</b> ∎LTE ■⊃ Ξ Č Ç	Select how to add the device
Touch Next	Connect your device for smarter living. Add a Device • • • • ESS_Home ~ ESS_Home ~ Take a tour Explore the app for smart living.	Scan QR Scan QR attached to the device to add the device. Scan QR attached to the device to add Select Device Manually select a device to add it.
Touch ESS Home	Dehumidifier Ceiling Fan	Water Heater Wearable Air Purifier Case Laptop Smart ThinQ Hub (Speaker Type)

### Home 5/8 Quick Commissiong Guide ThinQ App

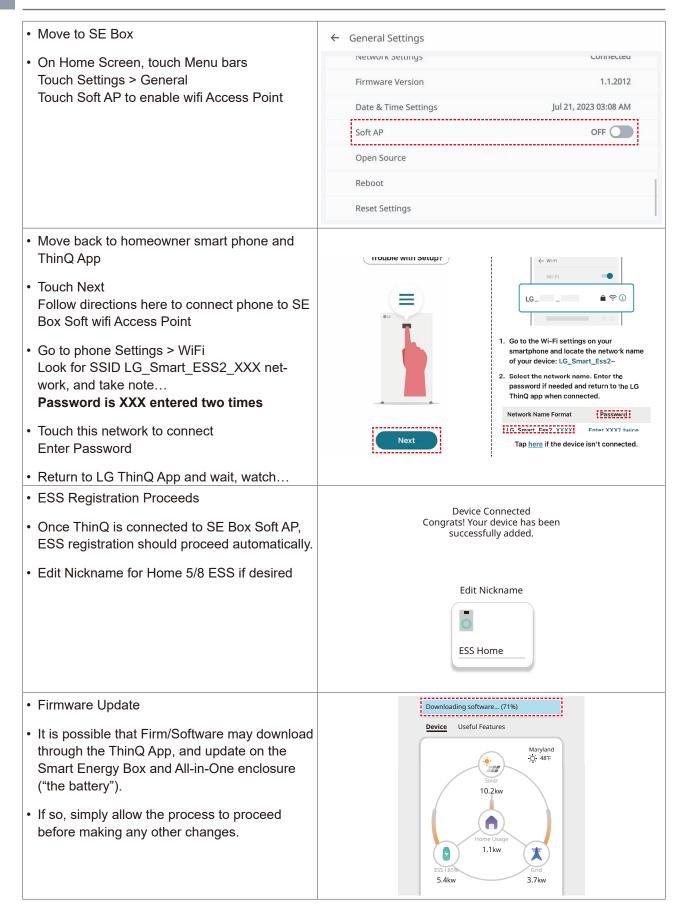

### Home 5/8 Quick Commissiong Guide ThinQ App

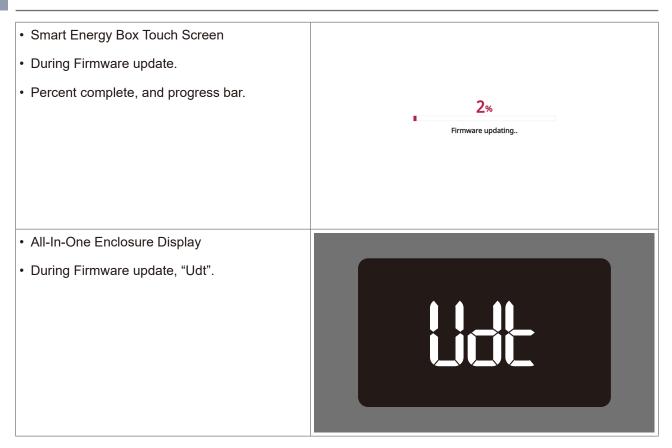

### Home 5/8 Quick Commissiong Guide **Product Specification**

#### **Specifications**

Model	Home 5	Home 8
Nominal Voltage (L-N/L-L)	120/240V Split Phase	
Grid Frequency (Nominal)	60 Hz	
Rated AC Power (Discharging)	5.0 kVA <sup>1)</sup>	7.5 kVA <sup>1)</sup>
Rated AC Power (Charging)	5.0 kVA <sup>1)</sup>	5.4 kVA <sup>1)</sup>
Total Capactiy	15.8 kWh	
Usable Capacity	14.4 kWh <sup>2)</sup>	
Round Trip Efficiency	> 90 % <sup>3) 4)</sup>	
CEC Efficiency (PCS only)	98%	
Overvoltage Category	Category IV	
Interface	LED Display	

1) Adjustable, limited by the battery pack output capability such as charging/discharging power derating by the atmosphere temperature.

2) Usable energy may be limited for enhancing the battery lifespan and system stability. The capacity may decrease as the battery ages.

3) Verified according to LG Electronics conditions.

4) AC to battery to AC with 4.32 kW charging and 2.88kW discharging power at 25°C (77°F) at the beginning of life.



LG Electronics ESS Tech Support Tel.: (844) 926-6829 Or by email: lghome8support@lge.com

LG Electronics USA, Inc. 111 Sylvan Avenue North Building Englewood Cliffs, NJ 07632 USA LG Customer Information Center

1-888-865-3026

Register your product online!

https://www.lg.com/us/ess