



www.LGUSA.com

CU320

Quick Start Guide



Cingular Video



Bluetooth Capable



1.3 Megapixel Camera/Video



MP3 Music Player



External Memory Port



Getting to Know Your Phone



Stereo
Headset
Jack

Volume
Keys

Memory Port

Use with optional TransFlash™ memory card to store and play MP3s, photos, videos and audio

Flash
(back)



Rotating
Camera Lens

Left/Right
Soft Keys

Camera Key

Task Key

Power/End
Key

Clear & Back
Key

Voice Recording Key

OK Key

Send Key



Take photos,
record video and
audio clips



Enables
multitasking

Go back or clear
text when editing

Cingular Video

Cingular Video brings your phone to life. Watch news, sports, weather and entertainment clips while on the go.

1. From standby mode, press the **Left Soft Key** for **Menu**.
2. Select **Cingular Video (6)**, then press **X** to connect.
3. Once connected, select the category or link you wish to view and press **X**.



The Sopranos
brought
to you by
HBOmobile

Parental Controls available.

Bluetooth®




Talk tangle-free in your car or out-and-about with a Bluetooth enabled headset or speakerphone. No wires. No hassle. All the way up to 30 feet away.

1. From standby mode, press the **Right Soft Key** for **Options**.
2. Select **Bluetooth (1)**, **Device List (1)**, and press **X**.
3. Press the **Left Soft Key** under **New** to search for Bluetooth enabled devices (set to pairing mode) that are within range.
4. Once the Bluetooth device has been found, highlight it and press **X**.
5. Enter the passcode (typically "0000" – 4 zeroes) and press **X**. If you don't know the passcode, please consult the user manual of the device you are trying to pair.
6. Press **X** to connect.



Taking a Picture




Capture everything around you in vivid detail through the 1.3 megapixel camera with flash. Then share it instantly with friends via multimedia messaging.

1. From standby mode, press and **release** the side **Camera Key**.
2. Rotate the lens toward you or your subject. If the viewfinder image appears upside-down, press either of the left side **Volume Keys** to flip it. To adjust resolution, quality, flash, self-timer and other options, press the **Right Soft Key**.
3. Frame your subject in the viewfinder, then press  to take the snapshot.
4. To send your picture, press the **Left Soft Key** for **Send**. Add text to personalize your message, then press  to enter recipients. To choose a contact from your address book, press .
5. Press the **Left Soft Key** to **Send**.



Recording a Video

Why settle for a snapshot when you can savor the entire moment. Nothing captures life, laughs or action like a video clip you can share at 3G speeds.



1. From standby mode, press and **hold** the side **Camera Key**.
2. Select **Record Video (2)** and press .
3. Rotate the lens toward you or your subject. If the viewfinder image appears upside-down, press either of the left side **Volume Keys** to flip it. To adjust record mode, resolution,* flash and other options, press the **Right Soft Key**.
4. Press  to start recording. Press the **Left Soft Key** to **Pause** or  to **Stop**.
5. To send the video clip, press the **Left Soft Key** for **Send**.

* Available only in General Record Mode.




External Memory

Boost storage for pictures, video and music with a TransFlash™ memory card* that tucks into the CU320's side memory port.

1. Open the memory port and insert a TransFlash card with gold contacts facing down. Push the card in gently until it snaps into place and close the cover.
2. To save pictures or video *directly* to the card, press the **Right Soft Key** for **Options** just prior to taking a picture or recording video or voice. Select **Primary Storage**, then **Memory Card**, and press .
3. To move multimedia content from the phone to the card, press the **My Stuff** icon (left) on the Navigation Key and select **Audios (2)**, **Graphics (4)**, or **Videos (5)**. Highlight a file and press the **Right Soft Key** for **Options**.
4. Select **Move**, then **Memory Card**, and press .
5. Press the **Left Soft Key** for **Paste**.







*TransFlash card sold separately.

Note: To view the content on your memory card, press the **My Stuff** icon (left) on the Navigation Key, then scroll up to **Memory Card (0)**, and press .

Playing Music

Stay entertained wherever you go by playing your favorite MP3s using the rich stereo speakers or your own headset.

1. Insert a TransFlash card* loaded with MP3 songs into the memory port (gold contacts facing down).
2. From standby mode, press the **Right Soft Key** for **Options**.
3. Select **MP3 Player (3)** and press .
4. Select **My Playlist (1)** to listen to your custom mix, **All Songs (2)** to hear particular songs stored on the TransFlash card or CU320, or **Shuffle Songs (3)** for music in random order, then press .
5. Press  to begin playing.
6. To use other phone functionality while keeping music playing in the background, press the **Right Soft Key** for **Options**, then press  for **Minimize (1)**.



*To play MP3 songs, an optional TransFlash card and card reader are required. Sold separately.

Multitasking


Multitask simultaneously with voice and data — browse the web, make calls, play games, send and receive messages, and listen to your MP3s. All at once.

1. If you're involved in one task and want to launch another, press the **Task Menu Key** (lower right side of phone), press the **Left Soft Key** for **Menu**, select the task you want to switch to, and press **X**.
2. If you have multiple tasks open, just press the **Task Menu Key** to display the task icon bar on the bottom of the screen, select another task, and press **X**.
3. If you get a call while in another task (except playing MP3s), you can accept the call, then return to the task while you're talking.



MEdia™ Net

With MEdia Net, you can get the information that is important to you at a glance. Your local weather, your teams scores, your movie theaters are just a couple of clicks away — and richer and faster with 3G.

1. From standby mode, press the **Left Soft Key** for **Menu**.
2. Select **MEdia Net (4)** menu, then press  for **MEdia Net Home (1)** to connect and browse the mobile web.

Shortcut: Press and **hold**  until you see the connecting screen.

