

NOTE: 2023 Magic Remotes use "BlueTooth" for communication. 2023 M-Remotes ARE backwards compatible with many previous year models.

NOTE BATTERIES:
2023 Magic Remote uses two "AA" batteries.

Using the Magic Remote:

01: If you shake the Magic Remote left and right or turn its wheel while pointing it at the TV, a pointer will appear on the TV screen. If you move the remote control in the direction you want, the pointer follows the movement.

02: Move the pointer to the location you want and press the **Wheel (OK)** button to execute the function.

03: If the pointer has not been used for a certain period of time, it will disappear. When the pointer disappears from the screen, shake the Magic Remote right and left. It will then re-appear. The pointer will disappear if you press the up, down, left, or right buttons, and the remote will work as a conventional remote.

- If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen.
- Use the remote control within the specified range (within 10 meters or 33 feet). The device may not function properly when outside the working distance or when an obstacle blocks the line of sight.


- Depending on the peripherals (wireless router, microwave oven, etc.), communication failures may occur.
- Impacts can cause the Magic Remote to malfunction.
- Take care not to bump into nearby furniture, electronic equipment, or other people when using the Magic Remote.
- For details on configuring the pointer of the Magic Remote, see **User Guide → Settings → System → Pointer Options**.












 Indicates NFC capable.

For Greater details, see the **OLED55C3AUA Owner's Manual**



PAIRING: Press the Wheel OK button. 1st, Initializing, 2nd, Paired.
UN-PAIRING and REPAIRING AT THE SAME TIME: Press **HOME** and **SETTINGS** together and hold for 5 seconds. Instructions appear. Any previous paired remote is unregistered and pairing process begins.

For buttons with , please long-press (hold for more than a second).

- 9: Launch Quick Help.
- GUIDE: Launch Guide
- GUIDE: Displays Channel
- 0: The QUICK ACCESS edit screen appears.
- ... : It displays the additional buttons on the remote control.
- ...: Configures SAP.
- + - : It adjusts the volume level.
- : Select to turn off the sound from the TV.
- : Enter the Accessibility menu.
- ^v: You can change the channel.
- ↓ : Shows the recommended voice commands. You can use the voice recognition feature by holding down the button and speaking toward the remote control.
- 🏠 : Displays the Home menu.
- 🏠: Launches the last used app.
- 📺 : Selects an input source.
- 📺: Entering into the Home Dashboard.
- ↶ : Move to the previous step.
- ↶: Closes the menu.
- ⚙️ : Enters the Quick Settings menu.
- ⚙️: Enters the All Settings menu.
- 📺: Launch Record. (Not for US models.)

Using TV features with Hands-free Voice Control

This function is only available when the TV is connected to the Internet.

If Hands-free Voice Control does not work, set Use Hands-free Voice Control to On in  →  → General → AI Service Voice Recognition Settings.

To operate a connected device with Hands-free Voice Control, connect the IR blaster and set the universal remote control.

When the TV is on: Or in Always Ready

- 01 Say "Hi LG" within the watching distance from your TV.
- 02 The speech recognition screen appears.